


**EN**

08.2019



# Elastomer Jaw Couplings **RINGFEDER® TNM H**

## Installation and Operation Manual

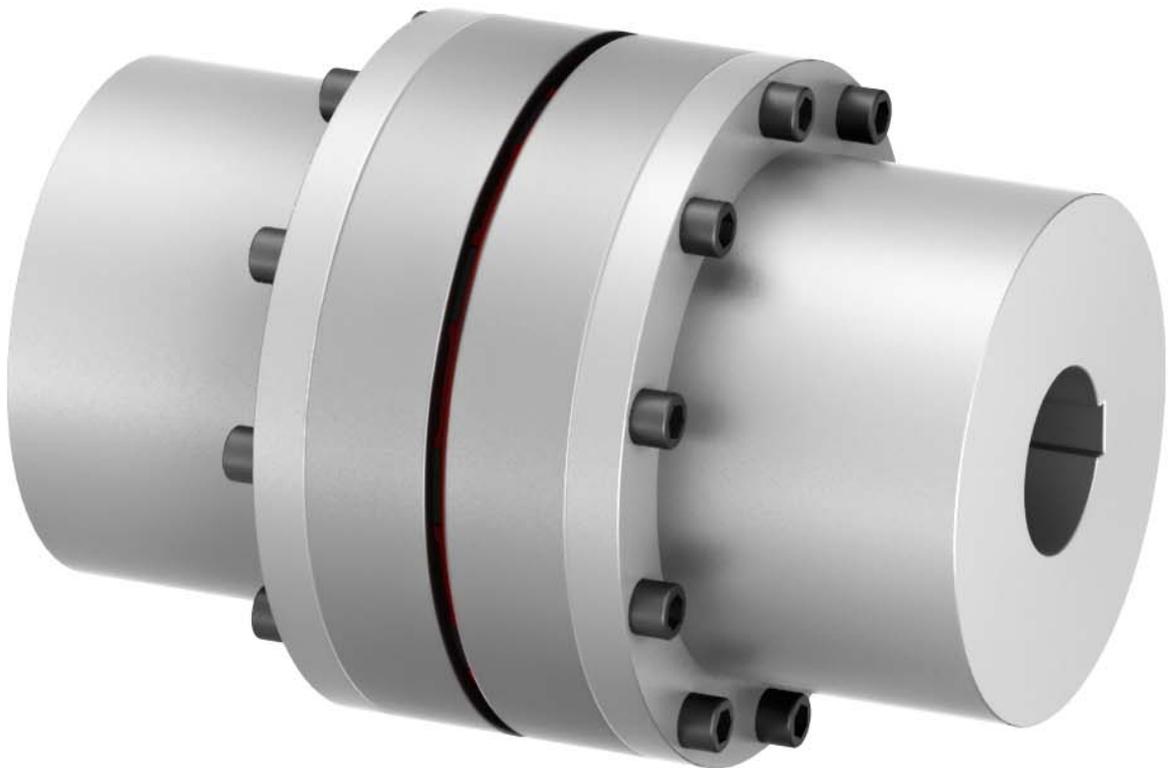

---

## Content

Chapter	Page
1 Notes on safety.....	2
2 Function.....	3
2.1 Appropriate Use.....	3
3 Marking of the coupling.....	3
4 Storage.....	4
5 Construction.....	5
6 Technical data.....	6
7 Assembly.....	7
7.1 Pay attention before the assembly.....	7
7.2 Finished borehole.....	8
7.3 Installing coupling.....	9
8 Adjusting coupling.....	11
8.1 Angular misalignment $\Delta K_w$ .....	12
8.2 Radial displacement $\Delta K_r$ .....	12
8.3 Axial displacement.....	13
9 Operation.....	14
9.1 Sense of rotation test.....	17
10 Maintenance.....	19
10.1 Wear Inspection on the Buffer Ring.....	19
10.2 Wear limit of elastic buffers.....	20
10.3 Changing the elastic intermediate ring.....	20
11 Waste Disposal.....	21

---

## 1 Notes on safety

The present assembly and operating instruction (AOI) constitutes a part of the coupling supply. Always keep the AOI near the coupling well accessible.  
The German version of this manual is the predominant and binding version.

Make sure that all persons charged with the assembly, operating, service, and maintenance have read and understood the AOI and follow all the points:

- Avert hazards for body and life of the user and third parties.
- Ensure the operating safety of the coupling.
- Avoid the loss of use and environmental impairment through false handling.

In the case of transport, mounting, dismounting and maintenance, attention is to be paid to the relevant regulations for industrial safety and for environmental care.

The coupling may only be operated, mounted, serviced and maintained by authorised and trained personnel.

The user must take into account that the bolting elements of coupling parts may be adversely affected by the heat produced by a brake disk/ brake drum due to the resultant friction. Make sure that the combination of the employed brake lining with the material of the brake disk/ brake drum does not lead to sparks or impermissible thermal growth. The brake disk is

normally made of steel, and the brake disk is normally made of cast iron with nodular graphite. In case of any doubt, please consult the supplier!

In the interest of further development, we reserve the right to make changes which serve technological progress.

By the use of accessories and spare parts, which were not originally manufactured by RINGFEDER POWER TRANSMISSION, we are not responsible for any resulting damage or liability or guarantee.

---

## 2 Function

The coupling RINGFEDER® TNM H is a torsionally elastic and puncture-proof claw coupling with a removable intermediate piece, mainly for the drives of pumps.

It levels out angular, radial and axial shaft misalignments within defined ranges. The coupling transfers the torque via pressure loadable, elastic buffers of Perbunan (Pb) which are joined together as an intermediate ring.

The elastic intermediate ring can cushion impacts and torsional vibrations; it is oil-tight and electrically conductive.

Both coupling halves are divided in two, which enables a radial installation and de-installation of the reduction sleeve. The de-installation measurement between the flange hubs allows the changing of the elastic intermediate ring or the dismantling of the bearing block of a centrifugal pump without moving the motor. The coupling is usable in every sense of rotation and installation position.

### 2.1 Appropriate Use

- In order to ensure a faultless, lasting operation of the coupling, it must be laid out according to the instructions e.g. DIN 740 part 2 (or also Product Paper & Tech Paper "Elastomer Jaw Couplings") with an operating factor corresponding to its operating conditions.
- The coupling must only be operated in normal industrial atmospheres. Since aggressive media may attack the coupling components, screws and elastic buffer rings, they represent a risk for the operational safety of the coupling. Consult RINGFEDER POWER TRANSMISSION in such cases.
- Apart from incorporating a finished borehole with parallel key slot (see "7.2 Finished borehole") no further changes can be carried out on the coupling.
- The coupling may only be used within the framework of the conditions defined in the performance and delivery contract.
- Every change of the conditions of use or the operating parameters necessitates a new verification of the coupling layout.

---

## 3 Marking of the coupling

The product line RINGFEDER® TNM H has its hardness in Shore (A) indicated on the elastic intermediate ring.

---

## 4 Storage

On receipt of the goods, the supply is to be checked immediately for completeness and correctness. Possible damages incurred during transit and / or missing parts are to be notified in writing.

The coupling parts can be stored in their delivered standard-state for 6 months in a dry, roofed place at normal room temperature. For a longer storage duration a long-term preservation is necessary (consult RINGFEDER POWER TRANSMISSION). The elastic intermediate ring must not be subjected to ozone containing mediums, direct solar influence or strong light sources with ultraviolet-light. The relative humidity must not exceed 65%. In the case of proper storage the characteristics of the elastic intermediate ring remain unchanged for almost up to three years.

## 5 Construction

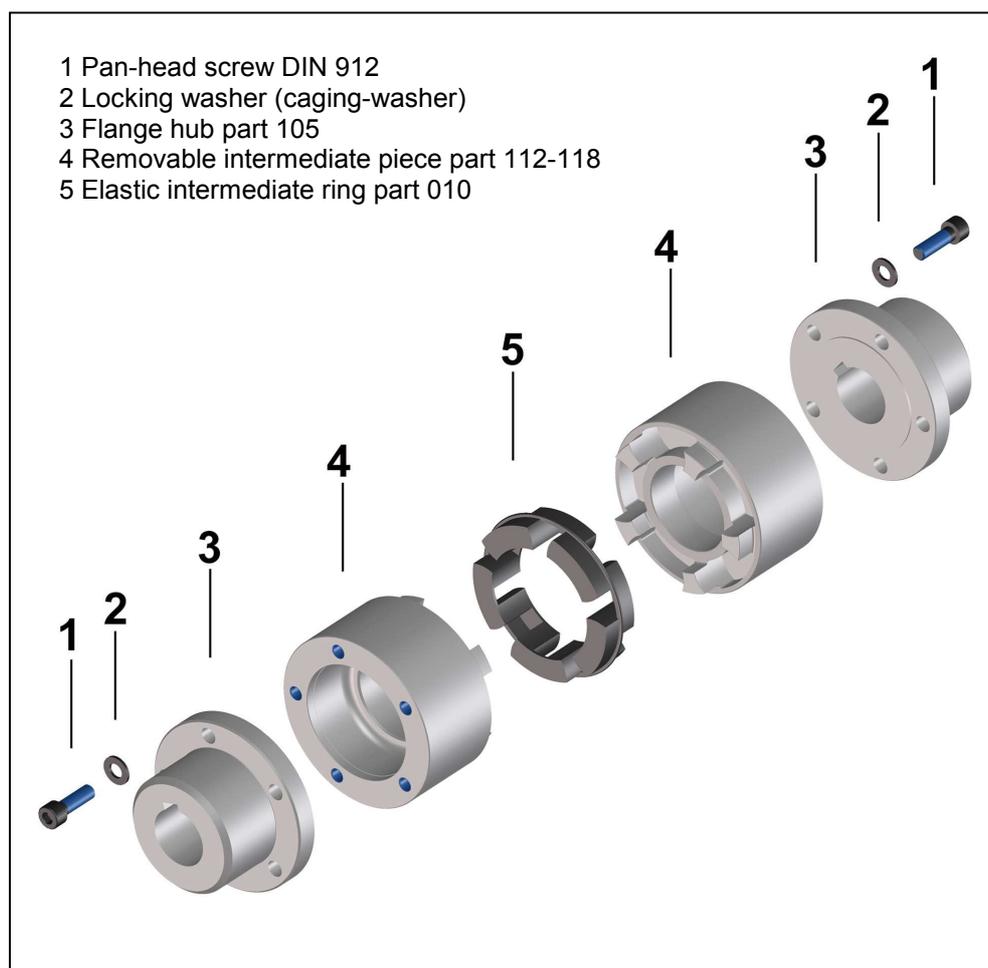


Fig. 1 Construction RINGFEDER® TNM H

### Reference:

Flange hubs (Pos. 3) and removable intermediate piece (Pos. 4) are always delivered screwed together.

Balanced parts are position marked to each other.

## 6 Technical data

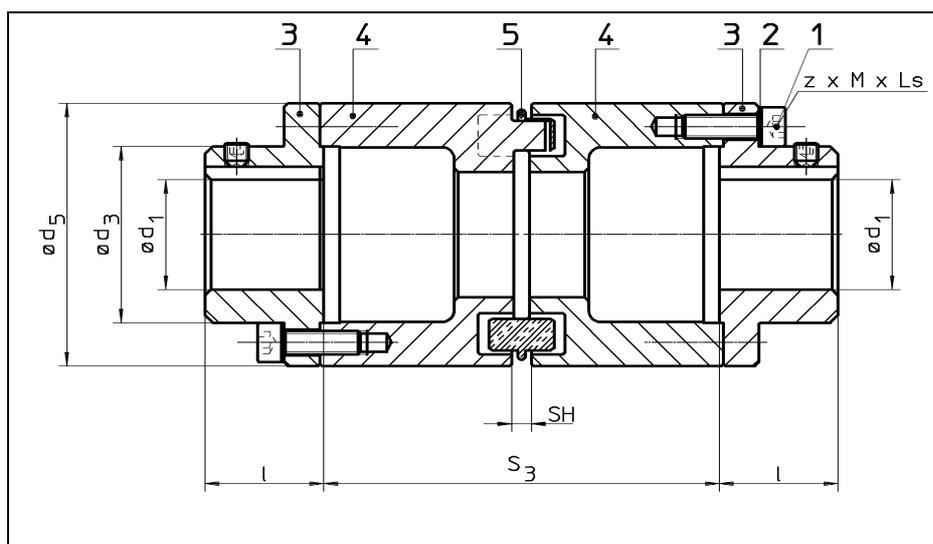


Fig. 2 RINGFEDER® TNM H

Table 1 Technical data:

Size TNM H	T <sub>Cnom</sub> Pb72 [Nm]	T <sub>Cpeak</sub> Pb72 [Nm]	T <sub>Cnom</sub> Pb82 [Nm]	T <sub>Cpeak</sub> Pb82 [Nm]	n <sub>max</sub> [min <sup>-1</sup> ]	d <sub>1</sub> max [mm]	d <sub>3</sub> [mm]	d <sub>5</sub> [mm]	L [mm]	z x M x Ls	SH [mm]
67	22	45	35	75	10000	28	45	67	30	4 x M 6 x 20	5
82	48	100	75	160	8000	32	53	82	40	4 x M 8 x 25	5
97	96	200	150	340	7000	42	66	97	50	5 x M 8 x 25	5
112	150	310	230	540	6000	48	79	112	60	6 x M 8 x 25	7
128	250	500	380	860	5000	55	90	128	70	6 x M 8 x 25	7
148	390	800	600	1350	4500	65	107	148	80	7 x M10 x 35	7
168	630	1300	980	2250	4000	75	124	168	90	8 x M10 x 35	7
194	1050	2000	1650	3630	3500	85	140	194	100	9 x M10 x 35	7
214	1500	3100	2400	5400	3000	95	157	214	110	9 x M12 x 40	7
240	2400	4800	3700	8650	2750	110	179	240	120	10 x M12 x 40	8
265	3700	7500	5800	13500	2500	120	198	265	140	10 x M14 x 45	8
295	4900	10000	7550	18000	2250	130	214	295	150	10 x M14 x 50	10
330	6400	13000	9900	23400	2000	150	248	330	160	10 x M16 x 55	10
370	8900	18200	14000	32750	1750	170	278	370	180	11 x M16 x 55	10
415	13200	27000	20500	49000	1500	190	315	415	200	12 x M16 x 55	10

Size TNM H	S3=100mm m [kg]	S3=120mm m [kg]	S3=140mm m [kg]	S3=180mm m [kg]	S3=250mm m [kg]	S3=300mm m [kg]
67	2,5	2,8	3,1			
82	4,0	4,4	4,9			
97	6,4	7,0	7,7			
112	9,5	10,3	11,1			
128	13,2	14,1	15,1	17,0		
148	19,4	20,6	21,8	24,3		
168	27,5	28,9	30,3	33,2		
194	37,7		37,0	44,6	50,7	
214	50,5		50,2	58,9	66,2	
240	70,5		74,1	78,8	86,6	
265	97,0		89,2	105,0	115,4	
295			131,1	137,8	147,8	
330			182,2	191,0	205,8	
370			240,2	250,9	291,4	
415				306,1	314,1	319,5

The torque  $T_{Cnom}$  and  $T_{Cpeak}$  is valid for:

- Intermediate rings of Perbunan Pb72 and/or Pb82,
- Ambient temperatures of -40 °C to +60 °C,
- Operation within the stipulated alignment values.

Weights are specified for couplings without bores in the hubs.

During the layout of the coupling according to DIN 740 part 2 (or also Product Paper & Tech Paper "Elastomer Jaw Couplings") different factors must be considered:

- with higher temperatures a corresponding temperature factor  $S_v$
- according to the starting frequency a starting factor  $S_z$
- in dependence of the operating conditions an impact factor,  $S_A$ ,  $S_L$

With circumferential speeds of more than 22 m/s, we recommend to balance the coupling.

---

## 7 Assembly

### 7.1 Pay attention before the assembly



- **Danger of injuries!**
  - **Disconnect the drive before carrying out any work on the coupling!**
  - **Secure the drive against unintentional re-start and rotation!**
  - **Incorrectly tightened bolts can cause serious personal injuries and property damages!**
  - **In compliance with accident prevention regulations, you are obliged to protect all freely rotating parts by means of permanently installed guards/ covers against unintentional contact and falling down objects.**
  - **To avoid sparks, the covers for couplings used in explosive atmospheres should be made of stainless steel!**
  - **As a minimum, the covers have to fulfil the requirements of protection type IP2X.**
  - **The covers have to be designed to prevent dust from depositing on the coupling.**
  - **The cover must not contact the coupling or impair the proper function of the coupling.**
- 
- Make sure that the speeds, torques and ambient temperatures as stated in chapter 6 'Technical Data' are not exceeded.
  - The maximum permissible bore diameters must not be exceeded.
  - Check whether the shaft-hub connections safely transmit the occurring operating torques.
  - The standard tolerance of RINGFEDER® TNM for finish bores is fit H7.
  - Standard keyways comply with DIN 6885, sheet 1.
  - Check the dimensions and tolerances of shafts, hub bores, keys and keyways.
  - Set screws as required.

## 7.2 Finished borehole


For the completion of a finished borehole in a flange hub pay attention to following procedure:

- Clean the coupling hub of preservatives.
- Tighten the flange hub to the faces labelled with [ and carefully align the flange hub.
- The indicated values in table 1 for  $\varnothing d_{1max}$  are valid for a parallel key connection according to DIN 6885/1 and must not be exceeded.
- Choose the borehole fit so that during the union with the shaft a tolerance wringing fit and/or interference fit as for example with H7/m6 is made.
- Provide an axial securing of the hub, where appropriate with a setscrew on the hub back above the parallel key slot.

In the case of other shaft hub connections consultation with RINGFEDER POWER TRANSMISSION is necessary.



- **The maximum indicated bore diameters are valid for a parallel key connection according to DIN 6885/1 and must not be exceeded.**
- **In the case of transgression of these values the coupling can sever.**
- **Due to flying away fragments danger exists!**

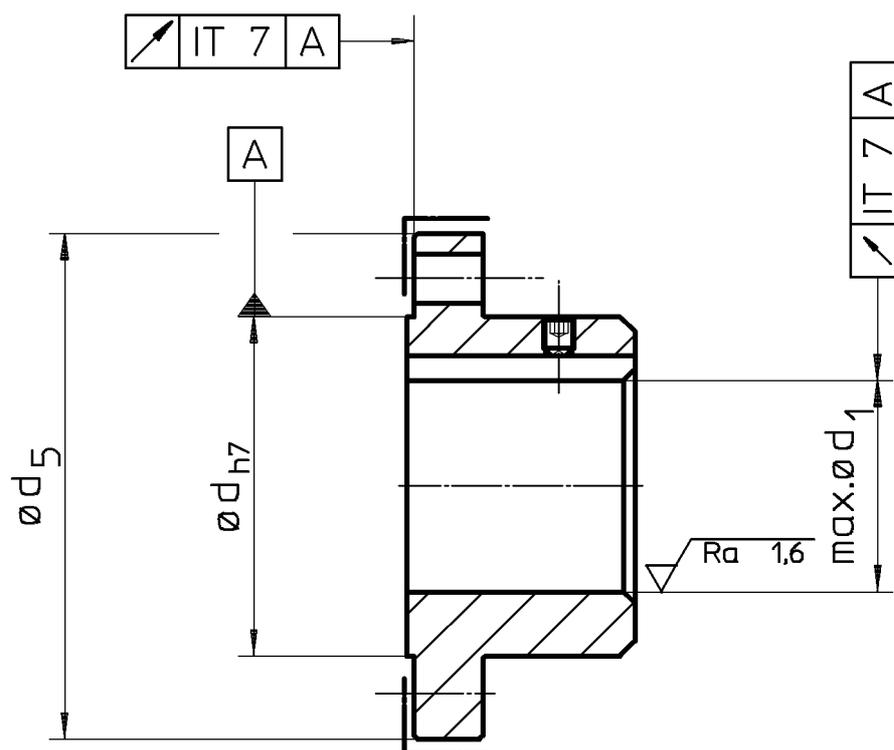

### 7.3 Installing coupling

- Take out the elastic intermediate ring (Figure 3, Pos. 1).
- Clean the boreholes of the flange hubs and the shaft ends before installing. The surfaces must be clean, dry and grease-free.
- Use suitable installation aids and hoists such as cranes or pulley blocks in the case of bigger couplings.
- Pull the flange hubs with the reduction sleeve onto the shaft ends to its provided position (Figure 3, Pos. 2).

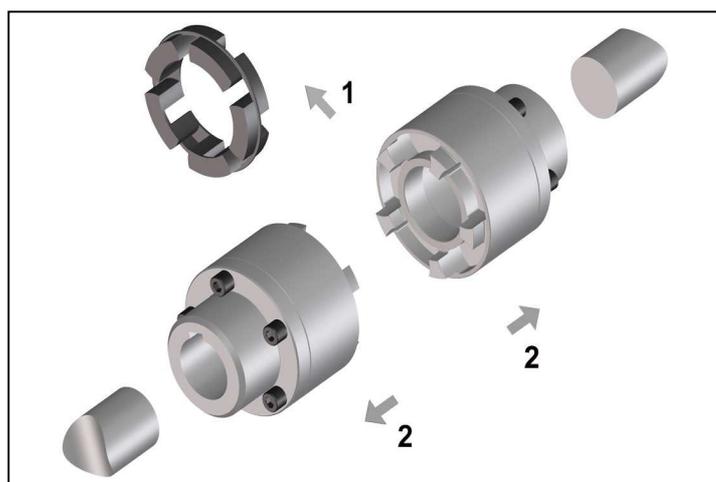


Fig. 3

#### Reference:

For easier installation a uniform warming of the hub from 80 °C to 120 °C is safe.



- **Warning!**
- **Only work with gloves as a protection against hot parts of the coupling!**

- Mount the hubs so that the shaft ends are flush with the interior borehole openings (Figure 4). Overlapping shaft ends prevent the radial installation and de-installation of the reduction sleeve. Pay attention to possible differing agreements!
- Secure possible available set-screws when tightening with an adhesive e.g. Loctite 222 against automatic loosening and flying out.

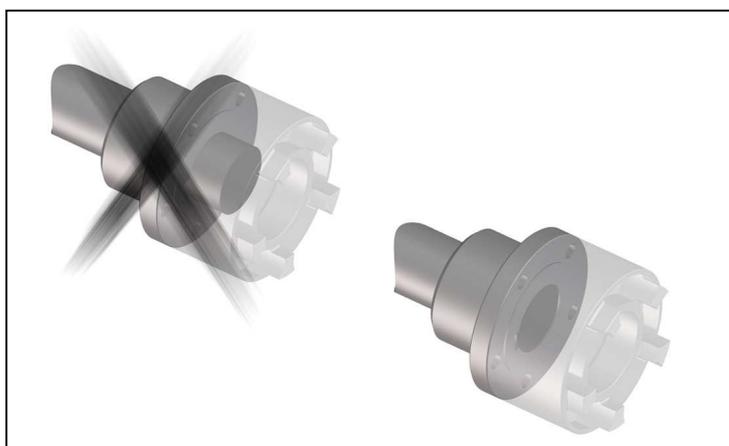


Fig. 4

**ATTENTION!**

Let the hot hubs cool off to ambient temperature before the introduction of the intermediate ring.

- For easier mounting the elastic intermediate ring can be provided with a slip additive (e.g. Talcum) before introduction).
- Fit the intermediate ring into one half of the coupling
- Push together the shaft ends with the mounted half of the clutch (Figure 5).
- Adjust the coupling according to the following specifications in "8 Coupling adjustment".

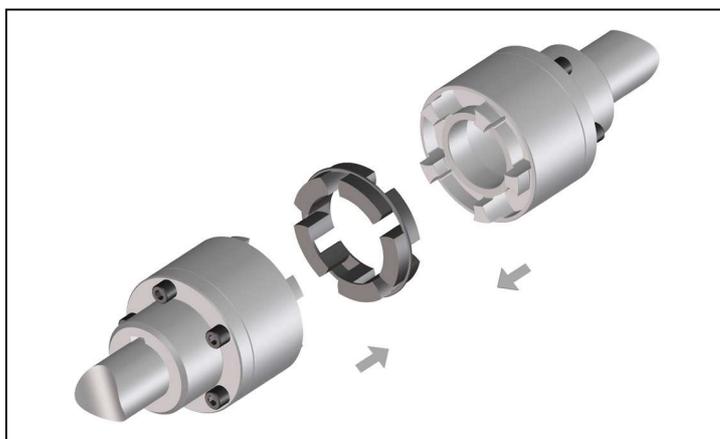


Fig. 5

**Reference:**

If the shaft distance is already adjusted to the de-installation measurement of the reduction sleeve:

- Firstly disassemble the reduction sleeve from the flange hubs.
- Pull the flange hubs separately onto the shaft ends.
- If setscrews are available, secure these against automatic loosening and flying out with an adhesive e.g. Loctite 222.

**Attention!**

The bearing surfaces of the reduction sleeves and flange hubs must be clean, dry and grease-free. Balanced parts are position marked to each other.

- Position the transition pieces in their respective marked position. Pay attention that, the parts do not tilt during the joining on the centering seat.
- Tighten the screws slightly and uniformly.
- Tighten up the bush screw fitting with the tightening torque  $M_A$  as stipulated in table 2 (Figure 6).
- Adjust the coupling according to the following specifications in "8 Coupling adjustment".

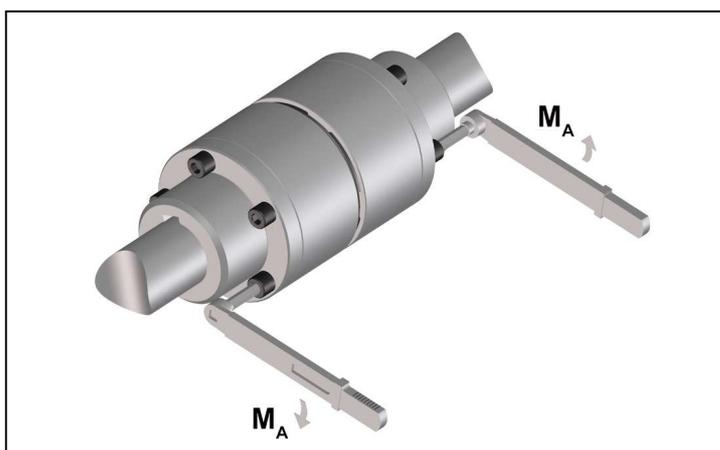


Fig. 6

**Table 2 Tightening torques  $M_A$  of the bush screw fitting:**

Size	67	82	97	112	128	148	168	194	214	240	265	295	330	370	415
DIN 912- 8.8	M6	M8	M8	M8	M10	M10	M10	M10							
DIN 912-10.9									M12	M12	M14	M14	M16	M16	M16
$M_A$ [Nm]	10	25	25	25	25	49	49	49	125	125	200	200	310	310	310

## 8 Adjusting coupling



- **Injury hazard!**
  - **Switch-off the drive before all work on the coupling!**
  - **Secure the drive against unintentional switching on and rotating!**
  - **Reference:**
  - **An exact alignment of the coupling increases the service life of the elastic intermediate ring and lessens hazards by use.**
  - **Do not exceed the maximum permissible displacement values. An overstepping of these values results in coupling damage and breakdown!**
- When aligning the cold equipment take into account the expected thermal growth of the components, so that the permissible misalignment values for the coupling are not exceeded in operation.
  - Be aware that the coupling under misalignment imposes restoring forces on the adjacent shafts and bearings. Take into account that the larger the misalignment, the greater the restoring forces will be.
  - The displacement values indicated in the tables 3 to 5 are maximum permissible guide numbers.  
We recommend not to fully utilise these values during the alignment, so that in operation sufficient reserves remain for thermal expansions, foundation settlements etc.
  - In special cases with high demands on quiet running or high rotating speeds it is possible that, in the three displacement levels, an alignment accuracy of  $\leq 0,1$  mm is necessary.
  - If the coupling is mounted in a closed housing / casing so that a subsequent alignment is not possible any more, it must be guaranteed that the geometry and fit accuracy of the contact surfaces in operation aligns the shafts exactly within the mentioned tolerances.

### 8.1 Angular misalignment $\Delta K_w$

- Measure on the face of the external diameter a complete rotation (360°). Determine in this case the greatest deviation  $\Delta K_{w1}$  as well as the smallest deviation  $\Delta K_{w2}$  (Figure 7).
- Calculate the angular misalignment  $\Delta K_w = \Delta K_{w1} - \Delta K_{w2}$ .
- The values in table 3 are valid for a reference rotation speed of  $1500 \text{ min}^{-1}$ .

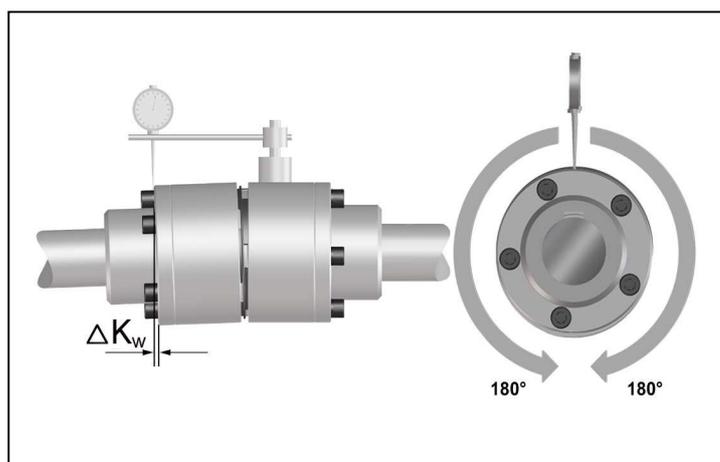


Fig. 7

**Table 3 Maximum permissible displacement values - angular:**

Size	67	82	97	112	128	148	168	194	214	240	265	295	330	370	415
$\Delta K_{w \max}$ [mm]	0,2	0,2	0,2	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3

### 8.2 Radial displacement $\Delta K_r$

- Measure a complete rotation (360°). Determine in this case the greatest deviation  $\Delta K_{r1}$  as well as the smallest deviation  $\Delta K_{r2}$  (Figure 8).
- Calculate the radial displacement  $\Delta K_r = 0,5 \times (\Delta K_{r1} - \Delta K_{r2})$ . Pay attention to the operational sign of the measured values.
- The values in table 4 are valid for a reference rotation speed of  $1500 \text{ min}^{-1}$ .

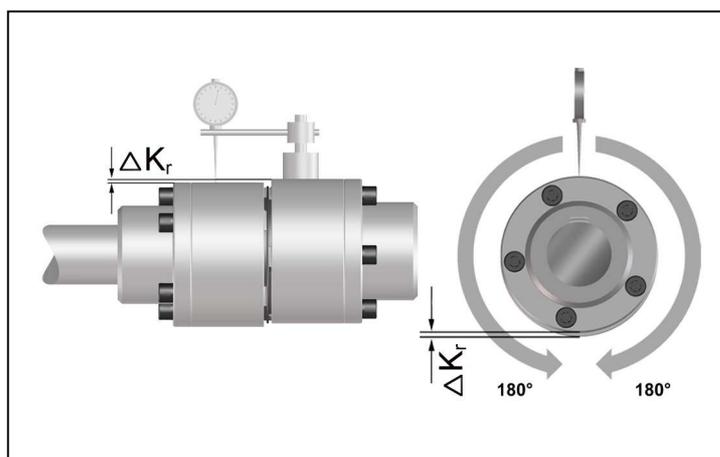


Fig. 8

**Table 4 Maximum permissible displacement values - radial:**

Size	67	82	97	112	128	148	168	194	214	240	265	295	330	370	415
$\Delta K_{r \max}$ [mm]	0,2	0,2	0,2	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3	0,3

### 8.3 Axial displacement

- Measure, according to Figure 9 the axial gap measurement  $S_H$ .
- Keep to the maximum permissible tolerance  $X$  according to table 5, when aligning the gap measurement  $S_H$ .

#### ATTENTION!

If the installation dimension remains under  $S_H$ , the intermediate pieces can not be lifted out!  
 If during operation greater axial displacements are expected, then consultation with RINGFEDER POWER TRANSMISSION is necessary.

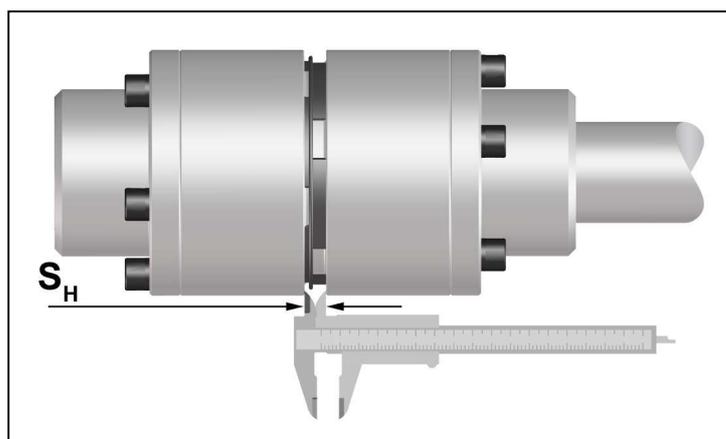


Fig. 9

**Table 5 Recommended alignment values - axial:**

Size	67	82	97	112	128	148	168	194	214	240	265	295	330	370	415
$S_H$ [mm]	5	5	5	7	7	7	7	7	7	8	8	8	10	10	10
$X$ [mm]	+0,5	+1,0	+1,0	+1,0	+1,0	+1,0	+1,5	+1,5	+1,5	+1,5	+2,5	+2,5	+2,5	+2,5	+2,5

## 9 Operation

When using the coupling, attention is to be paid to its rating (see "6 Technical data"). This cannot in no case be exceeded without written permission from RINGFEDER POWER TRANSMISSION. In order to ensure a faultless, lasting operation of the coupling, it must be laid out according to the instructions e.g. DIN 740 part 2 (or also Product Paper & Tech Paper "Elastomer Jaw Couplings") with an operating factor corresponding to its operating conditions. Every change of the conditions of use or the operating parameters makes an inspection of the coupling layout urgently necessary.



- **Injury hazard!**
- **Switch-off the drive before all work on the coupling!**
- **Secure the drive against unintentional switching on and rotating!**
- **Due to incorrectly tightened screws parts can fly away and cause serious injuries to persons and material damage!**
- **Check before commissioning the coupling its alignment and all screw fixings for their specified tightening torque and/or firm seating!**
- **Before commissioning the plant all protective devices against unintentional touching of free moving and/or rotating parts must be installed.**
- **To avoid sparks coverings in stainless steel should be used!**
- **The coverings must fulfil at least the demands of protection type IP2X.**
- **The covering is to be so designed that it does not deposit dust onto the coupling parts.**
- **The coverings must not touch the coupling or influence it in its functioning.**

### **Pay attention during the operation of the coupling to:**

- Changed running noises
- Occurring vibrations

### **Attention!**

- **If irregularities are found during the operation of the coupling, the drive must be immediately switched off.**
- Detect according to the following table 6 "Operating faults and their possible causes" the fault cause and remove them  
The listed faults are some examples which are supposed to facilitate fault location.
- **For fault finding and elimination, all machine components and operating states are to be considered!**

**Table 6 Operating faults and their possible causes:**

<b>Trouble</b>	<b>Cause</b>	<b>Risk Warning</b>	<b>Correction</b>
Irregular running noises/ vibrations	Alignment fault	Considerable increase in coupling temperature. Premature wear of elastic buffers. Increased reaction forces act on connected machines.	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Remove cause for alignment fault</li> <li>- Re-align coupling</li> <li>- Inspect elastomer for wear</li> </ul>
	Elastomer worn out	Coupling claws strike against each other. Spark formation, claw fracture, increased reaction forces.	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Check coupling components for damages and replace parts, if necessary</li> <li>- Replace elastomer</li> </ul>
	Unbalance	Considerable increase in coupling temperature. Premature wear of elastic buffers. Increased reaction forces act on connected machines	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Verify balance state of plant components and correct it, if necessary</li> <li>- Inspect elastomer for wear</li> </ul>
	Loose screw connections	Flying off parts can cause serious injuries and considerable damages.	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Check coupling parts for damages, replace parts, if necessary</li> <li>- Verify alignment of coupling</li> <li>- Tighten screws to the specified tightening torque and secure them against working loose, if necessary,</li> <li>- Inspect elastomer for wear</li> </ul>
Premature wear of elastomer	Alignment fault	Considerable increase in coupling temperature. Increased reaction forces act on connected machines.	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Remove cause for alignment fault</li> <li>- Re-align coupling</li> <li>- Inspect elastomer for wear</li> </ul>
	Unacceptable temperatures	Material properties of elastic buffers change. The torque transmission capability is adversely affected.	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Replace elastomer</li> <li>- Re-align coupling</li> <li>- Adjust ambient temperature</li> </ul>

<b>Trouble</b>	<b>Cause</b>	<b>Risk Warning</b>	<b>Correction</b>
	Contact with aggressive products	Material properties of elastic buffers change. The torque transmission capability is adversely affected.	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Check coupling parts for damages and replace parts, if necessary</li> <li>- Replace elastomer</li> <li>- Verify alignment of coupling</li> <li>- Prevent contact with aggressive products</li> </ul>
	Torsional vibrations in the drive line	Considerable increase in coupling temperature. Premature wear of elastic buffers. Increased reaction forces act on connected machines.	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Analyse and eliminate cause for torsional vibrations</li> <li>- Check coupling parts for damages and replace parts, if necessary</li> <li>- Replace elastomer and consult RINGFEDER POWER TRANSMISSION concerning eventual use of another Shore-hardness</li> <li>- Verify coupling alignment</li> </ul>
Claw breakage	Wear limit of elastomer exceeded ====> contact of claws	Coupling is destroyed. Connected machines can be affected, too.	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Replace coupling</li> <li>- Inspect the elastomer for wear at shorter intervals</li> </ul>
	Overload due to too high torque	Coupling is destroyed. Connected machines can be affected, too.	<ul style="list-style-type: none"> <li>- Disconnect drive</li> <li>- Verify coupling design in cooperation with RINGFEDER POWER TRANSMISSION</li> <li>- Replace coupling</li> <li>- Install larger coupling, if necessary</li> </ul>

## 9.1 Sense of rotation test



- **Injury hazard!**
- **Switch-off the drive before all work on the coupling!**
- **Secure the drive against unintentional switching on and rotating!**
- **Due to incorrectly tightened screws parts can fly away and cause serious injuries to persons and material damage!**
- **Check before commissioning the coupling its alignment and all screw fixings for their specified tightening torque and/or firm seating!**
- **Before commissioning the plant all protective devices against unintentional touching of free moving and/or rotating parts must be installed.**
- **To avoid sparks coverings should be of stainless steel!**
- **The coverings must fulfil at least the demands of protection type IP2X.**
- **The covering is to be so designed that it does not deposit dust onto the coupling parts.**
- **The coverings must not touch the coupling or influence it in its functioning.**

- Remove the holding-down bolts of the reduction sleeve
- Push together the intermediate pieces (Part 112-118) of the centring flange hubs (Part 105) with the elastic intermediate ring.
- Lift-out the intermediate pieces together with the elastic intermediate ring (Figure 10).  
Use in the case of bigger couplings suitable installation aids and hoists such as cranes or pulley blocks.
- Install after the sense of rotation test a new intermediate ring.
- For easier mounting, the new intermediate ring can be provided with a slip additive before introduction (e.g. Talcum).

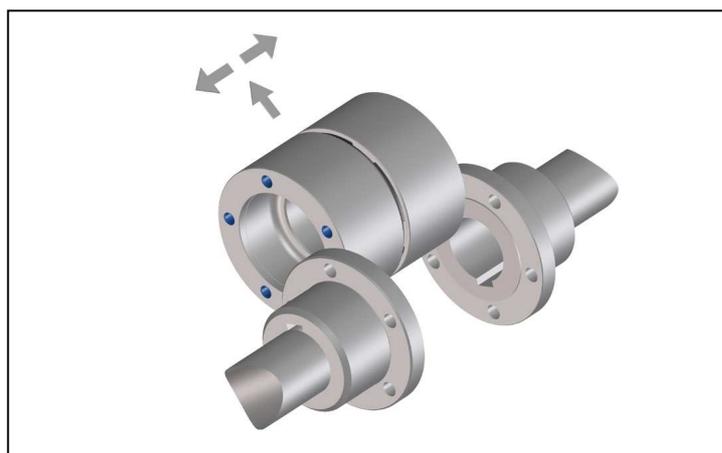


Fig. 10

### Attention!

The bearing surfaces of the reduction sleeves and flange hubs must be clean, dry and grease-free. Balanced parts are position marked to each other.

- Position the transition pieces in their respective marked position. Pay attention that, the parts do not tilt during the joining on the centering seat.
- Tighten the screws slightly.
- Tighten up the bush screw fitting with the tightening torque  $M_A$  stipulated in table 7 (Figure 11).
- Check the alignment of the coupling according to „8 Coupling adjustment”.

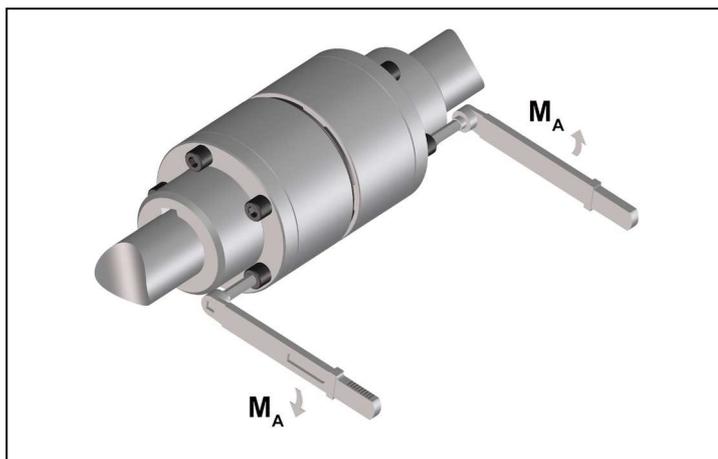


Fig. 11

**Table 7 Tightening torques  $M_A$  of the sleeve threaded joints:**

Size	67	82	97	112	128	148	168	194	214	240	265	295	330	370	415
DIN 912- 8.8	M6	M8	M8	M8	M10	M10	M10	M10							
DIN 912-10.9									M12	M12	M14	M14	M16	M16	M16
$M_A$ [Nm]	10	25	25	25	25	49	49	49	125	125	200	200	310	310	310

## 10 Maintenance

The elastic coupling RINGFEDER® TNM H has in operation a low-maintenance. Reaching the wear limit of the elastic intermediate ring depends on the operating parameters and the conditions of use.

In the case of routine monitoring work on the plant check:

- Alignment of the coupling
- Elastomer state
- Remove dust deposits from the coupling parts and the intermediate ring

### 10.1 Wear Inspection on the Buffer Ring



- **Injury hazard!**
- **Switch-off the drive before all work on the coupling!**
- **Secure the drive against unintentional switching on and rotating!**

Perform a visual inspection and a wear inspection of the buffer ring after 2000 hours, or after 3 months at latest, after the first start-up of the equipment. If only minor wear or no wear is observed, further inspections of the plant can be carried out at regular intervals of 4000 hours, however, at least once a year, if the operating modes and conditions of the plant remain unchanged. However, should you observe excessive wear on the occasion of this first inspection already, check whether the cause for the problem is listed in table 6 “Operation faults and possible causes”. In such a case, the inspection intervals must be adapted to the prevailing service conditions.

On the occasion of routine inspections or maintenance work on the drive equipment, or after 3 years at latest:

- Replace the elastic buffer ring.
- If the wear limit has been reached or exceeded, replace the buffer ring immediately, irrespective of the inspection intervals of the equipment.
- Check the alignment of the coupling.
- Remove dust deposits from the coupling components and buffer ring.

## 10.2 Wear limit of elastic buffers

Replace the elastic buffer ring as soon as the coupling has a distinct torsional backlash, or if the minimum buffer thickness ( $PD_{min}$ , Fig. 12) acc. to table 8 has been reached.

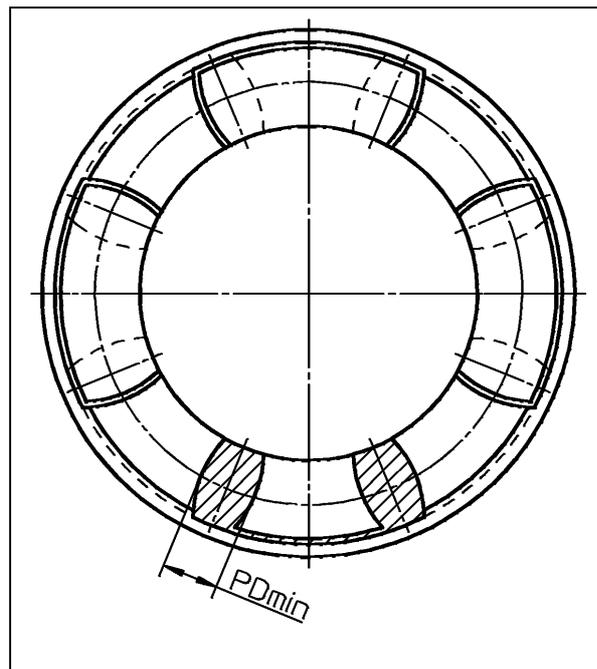


Fig. 12 Buffer thickness

**Table 8** Minimum buffer thickness  $PD_{min}$ :

Size	67	82	97	112	128	148	168	194	214	240	265	295	330	370	415
$PD_{min}$ [mm]	6	8	9	9	9	10	10	10	10	11	12	13	14	16	17

## 10.3 Changing the elastic intermediate ring



- **Injury hazard!**
- **Switch-off the drive before all work on the coupling!**
- **Secure the drive against unintentional switching on and rotating!**

- Remove the holding-down screws of the reduction sleeve
- Push together the intermediate pieces (Part 112-118) of the centring flange hubs (Part 105) with the elastic intermediate ring (Figure 13).
- Lift-out the intermediate pieces together with the elastic intermediate ring. Use suitable installation aids and hoists such as cranes or pulley blocks in the case of bigger couplings.
- For easier mounting, the new intermediate ring can be provided with a slip additive before introduction (e.g. Talcum).
- Install the new intermediate ring.

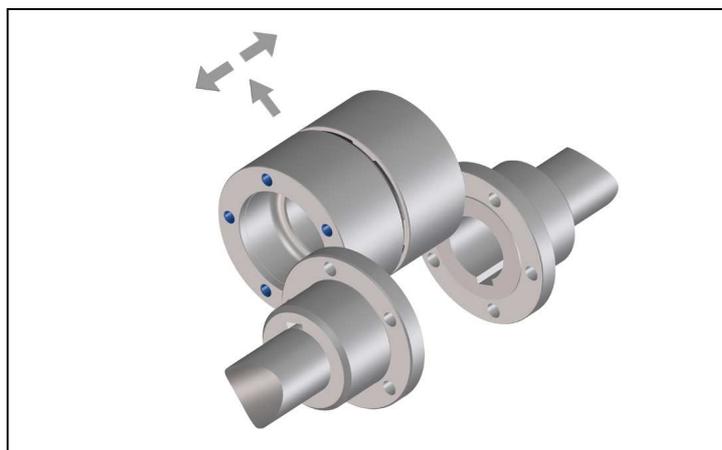


Fig. 13

### Attention!

The bearing surfaces of the reduction sleeves and flange hubs must be clean, dry and grease-free. Balanced parts are position marked to each other.

- Position the transition pieces in their respective marked position. Pay attention that, the parts do not tilt during the joining on the centering seat.
- Tighten the screws slightly
- Tighten up the bush screw fitting with the tightening torque  $M_A$  as stipulated in table 2 (Figure 6).
- Check the alignment of the coupling according to "8 Coupling adjustment".

### Warning!



- Before commissioning the plant, install all protective devices against unintentional touching of free rotating parts.
- To avoid sparks coverings in stainless steel should be used.
- The coverings must fulfil at least the demands of protection type IP2X.
- The covering is to be so designed that it does not deposit dust onto the coupling parts.
- The covering must not touch the coupling or influence it in its function.

In the case of use of accessories and spare parts, which were not originally manufactured by RINGFEDER POWER TRANSMISSION, no liability or guarantee will be accepted for any resulting damage.

---

## 11 Waste Disposal

The waste disposal has to occur according to the specific regulations of the respective user country.

**RINGFEDER POWER TRANSMISSION GMBH**

Werner-Heisenberg-Straße 18, D-64823 Groß-Umstadt, Germany · Phone: +49 (0) 6078 9385-0 · Fax: +49 (0) 6078 9385-100  
E-mail: sales.international@ringfeder.com

**RINGFEDER POWER TRANSMISSION TSCHAN GMBH**

Zweibrücker Straße 104, D-66538 Neunkirchen, Germany · Phone: +49 (0) 6821 866-0 · Fax: +49 (0) 6821 866-4111  
E-mail: sales.tschan@ringfeder.com

**RINGFEDER POWER TRANSMISSION USA CORPORATION**

165 Carver Avenue, Westwood, NJ 07675, USA · Toll Free: +1 888 746-4333 · Phone: +1 201 666 3320 · Fax: +1 201 664 6053  
E-mail: sales.usa@ringfeder.com

**HENFEL INDÚSTRIA METALÚRGICA LTDA.**

Av. Major Hilário Tavares Pinheiro, 3447 · CEP 14871 300 · Jaboticabal - SP - Brazil · Phone: +55 (16) 3209-3422  
E-mail: vendas@henfel.com.br

**RINGFEDER POWER TRANSMISSION INDIA PRIVATE LIMITED**

Plot No. 4, Door No. 220, Mount - Poonamallee Road, Kattupakkam, Chennai – 600 056, India  
Phone: +91 (0) 44-2679 1411 · Fax: +91 (0) 44-2679 1422 · E-mail: sales.india@ringfeder.com

**KUNSHAN RINGFEDER POWER TRANSMISSION COMPANY LIMITED**

NO. 406 Jiande Road, Zhangpu 215321, Kunshan, Jiangsu Province, China  
Phone: +86 (0) 512-5745-3960 · Fax: +86 (0) 512-5745-3961 · E-mail: sales.china@ringfeder.com

Partner for Performance  
[www.ringfeder.com](http://www.ringfeder.com)

